



HOT DOG ROLLER GRILL

Operating Instructions

Canton Chair Rental

4850 Southway St SW Canton, OH 44706

330-477-7719 • 800-686-4331

After Hours Pager: 330-737-1227

www.cantonchairrental.com

TO BEGIN OPERATION:

1. Install the hot dog roller grill in a level position.
2. Plug the machine into a dedicated 20 amp circuit with no other electrical devices. We recommend that you do not use an extension cord, but if you plan to use one, make sure it is a heavy duty (12 gauge, 25') extension cord.
3. Place hot dogs on rollers, and set the heat to the designated temperature. The left knob controls the heat of one set of five rollers, and the right knob controls the other five rollers.
4. For low heat, set controls to LOW using one or both sets of rollers. For high capacity, set controls to MEDIUM or HIGH using both sets of rollers.

WHEN FINISHED:

1. Remove any remaining hot dogs from rollers.
2. Remove drip pans and clean thoroughly.
3. Use a mild detergent and water to clean the roller grill. Rinse after washing and dry thoroughly.
4. Re-insert drip pan beneath the rollers.

WARNING:

- The rollers become very hot. Use caution during operation.
- DO NOT immerse the machine in water.
- DO NOT use steel wool to clean.
- **Return all parts supplied with the machine to avoid additional charges!**



HOT DOG ROLLER GRILL

Operating Instructions

Canton Chair Rental

4850 Southway St SW Canton, OH 44706

330-477-7719 • 800-686-4331

After Hours Pager: 330-737-1227

www.cantonchairrental.com

TO BEGIN OPERATION:

1. Install the hot dog roller grill in a level position.
2. Plug the machine into a dedicated 20 amp circuit with no other electrical devices. We recommend that you do not use an extension cord, but if you plan to use one, make sure it is a heavy duty (12 gauge, 25') extension cord.
3. Place hot dogs on rollers, and set the heat to the designated temperature. The left knob controls the heat of one set of five rollers, and the right knob controls the other five rollers.
4. For low heat, set controls to LOW using one or both sets of rollers. For high capacity, set controls to MEDIUM or HIGH using both sets of rollers.

WHEN FINISHED:

1. Remove any remaining hot dogs from rollers.
2. Remove drip pans and clean thoroughly.
3. Use a mild detergent and water to clean the roller grill. Rinse after washing and dry thoroughly.
4. Re-insert drip pan beneath the rollers.

WARNING:

- The rollers become very hot. Use caution during operation.
- DO NOT immerse the machine in water.
- DO NOT use steel wool to clean.
- **Return all parts supplied with the machine to avoid additional charges!**