 


Canton Chair Rental

4850 Southway St SW Canton, OH 44706 330-477-7719 • 1-800-686-4331 www.cantonchairrental.com

Helium Tanks and Nozzles

- ① Safety cap
- ② Connection threads
- ③ Valve threads
- Valve handle
- ⑤ Latex nozzle
- ⑥ Mylar nozzle



- 1. Twist in nozzle and make sure it is tight.
- 2. Open the valve to helium tank (you may hear a pop).
- 3. Slide your helium quality balloon onto the end of the nozzle.
- 4. <u>Latex balloons</u>: push up or down on the nozzle to fill the balloon with helium. <u>Mylar balloons</u>: Push on the nozzle to fill balloon with helium.
- 5. When done, close the helium valve, deplete air out of nozzle, then take the nozzle off.

Latex, helium quality balloons will only last 6-8 hours.
You can extend the life by using hi-float.

DO NOT TRAVEL WITH NOZZLE ON TANK AND
SECURE TANK SO IT DOES NOT ROLL AROUND!!!