




Canton Chair Rental

4850 Southway St SW Canton, OH 44706
330-477-7719 • 800-686-4331
After Hours Pager: 330-737-1227
www.cantonchairrental.com

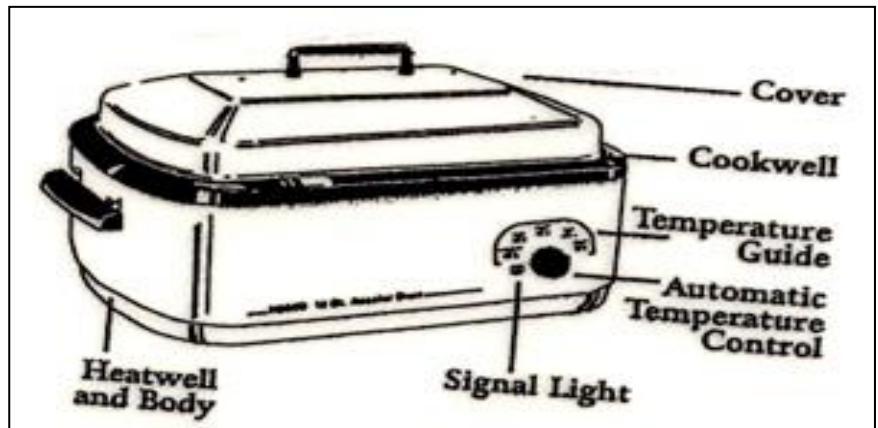

Roasters 18 qt (12 amps)

*Pan insert (cookwell) is removable for easy clean-up in the dishwasher or sink, or for food storage in the refrigerator.

*Never place food directly in the base (heatwell). Only put it in the cookwell.

***Keep in mind, these units should be on their own 20 amp circuit. We recommend that you do not use an extension cord. Plug directly into the outlet. If you are going to use an extension cord, please make sure it is a heavy duty (at least a 12 gauge) 25' extension cord.**

* The signal light is lit to show the roaster is heating. When a desired temperature is reached, the signal light goes out. It goes off and on during cooking indicating that the temperature is automatically maintained.

*There is a temperature guide on the front of the unit for commonly roasted foods.

*When lifting lid, use hot pads and tilt it away to divert escaping steam.

Instructions:

1. Place the cookwell into the heatwell.
2. Preheating is recommended. To preheat, place the cookwell into the heatwell and cover. Be sure the temperature control is turned to lowest setting, and plug the cord into the 120 volt AC outlet. Set the temperature control to desired temperature. Preheat 20 minutes or until red light goes off. Carefully, using hot pads, add food to the cookwell.
3. Replace the cover. Always cook with the cover in place.
4. If the roaster oven has not been preheated, turn the temperature control to off. Plug the cord into a 120 volt AC outlet. Set the temperature control to the desired temperature. Fill the cookwell with food as desired.
5. Cook the food the desired amount of time. When finished, turn the temperature control to lowest setting and unplug the cord from the 120 volt outlet. Allow the roaster to cool and clean as recommended below.
6. After it has cooled, remove cover and cookwell. Wash cookwell in warm sudsy water or place in the dishwasher. Only wash cover in warm sudsy water, **DO NOT PUT IN DISHWASHER!**
7. Cooked-on food may be removed by using a non-abrasive cleaning pad and non-abrasive cleansers, such as soft scrub. **Do not use a abrasive cleanser or steel wool as the finish may scratch.** To easily remove baked-on food residue, place cookwell in heatwell, then fill cookwell with hot water. Cover and heat at 350 degrees for 30 minutes. Turn off and allow to cool completely. Wash cookwell as directed above.
8. **Never immerse the roaster oven in water.** To clean, wipe outside of roaster with a damp cloth and dry. Do not use abrasive cleaners on exterior surface.