



Canton Chair Rental

4850 Southway St SW Canton, OH 44706 330-477-7719 • 1-800-686-4331 After Hours Pager 330-737-1227 www.cantonchairrental.com



Beverage Fountains

BEVERAGE FOUNTAINS ARE DESIGNED TO CIRCULATE CLEAR BEVERAGES. PULP, SEEDS, FRUIT, FOAMY PUNCHES OR ICE CREAM WILL RESTRICT THE FLOW OF THE BEVERAGE AND YEILD UNSATISFACTORY RESULTS!!!

Operating Tips:

- 1. You will need at least half of the total liquid capacity of the fountain to start. So if it is a **5 gallon fountain**, you need to have 2 ½ **gallons** to start up the fountain.
- 2. Plug in fountain. Lights will be on at that time. Keep in mind these units should be on their own 20 amp circuit for each one. We recommend that you do not use an extension cord. Plug directly into the outlet. If you are going to use an extension cord, please make sure it is heavy duty (at least a 12 gauge) 25' extension cord.
- 3. Pour beverage in lower reservoir of the fountain. Turn switch to "On". If beverage does not circulate within one minute, turn switch to "Off" for 10 seconds. Repeat this procedure until beverage flows freely. If this fails, with switch in "On" position, pour beverage into top reservoir until pump is activated. If for some reason it still does not circulate, please call Canton Chair Rental immediately for assistance. We are available at all times-see phone numbers listed at the top of the page!
- 4. DO NOT RUN FOUNTAIN DRY. DO NOT IMMERSE BASE OF FOUNTAIN IN WATER. Beverage Tips:
- 1. Chill beverages with ice cubes or chunks of ice/dry ice in fountain bowl.
- 2. Pre-chill beverages to 36 degrees before adding to the fountain.
- 3. Pre-chill carbonated beverages to 36 degrees before adding to fountain.
- 4. Maintain carbonation by adding small amounts; carbonation dissipates after 10-20 minutes **Quantities:**

Champagne: 1 case/12 bottles for 80 drinks Liquor: 21 to 28 drinks per quart of liquor

Punch: 32-3 oz drinks per gallon

Cleaning Tips:

- 1. Empty remaining beverage and fill lower reservoir with two gallons of warm water. Let water circulate for five minutes. Empty the fountain and repeat.
- 2. DO NOT USE SCOURING PADS OR ANY TYPE OF ABRASIVES.
- 3. DO NOT TAKE FOUNTAIN APART!

C:\Documents and Settings\All Users\Documents\Equipment\Fountains & Punch Bowls\Punch Fountains\CUSTOMER INSTUCTIONS - Beverage Fountains.doc