


Canton Chair Rental

4850 Southway St SW Canton, OH 44706 330-477-7719 • 800-686-4331 After Hours Pager: 330-737-1227 www.cantonchairrental.com

Helium Tanks and Nozzles

- ① Safety cap
- ② Connection threads
- ③ Valve threads
- 4 Valve handle
- S Latex nozzle
- 6 Mylar nozzle

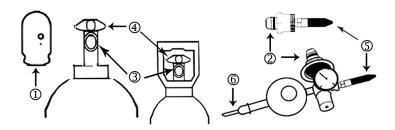

- 1. Test in nozzle and make sure it is tight.
- 2. Open the valve to helium tank (you may hear a pop).
- 3. Slide your helium quality balloon onto the end of the nozzle.
- 4. <u>Latex balloons:</u> Push up or down on the nozzle to fill the balloon with helium. Mylar balloons: Push on the nozzle to fill the balloon with helium.
- 5. When done, close the helium valve, deplete air out of nozzle, then take the nozzle off.

Latex, helium quality balloons will oly last 6-8 hours.
You can extend the life by using hi-float.

<u>DO NOT TRAVEL WITH NOZZLE ON TANK AND</u>

<u>SECURE TANK SO IT DOES NOT ROLL AROUND!!</u>

WARNING

Helium is under pressure. Never open the cylinder valve without a nozzle fitted.

Eye protection is recommended when filling balloons.

Helium is non-toxic; however it is dangerous to inhale as it may cause suffocation.

Serious injury may result from inhaling helium directly from the cylinder or valve nozzle.

You must immediately cease using the equipment in the event it is or appears to be malfunctioning and take all reasonable precautions to avoid injury or damage. No maintenance or adjustments shall be performed.

Not suitable for use by young children. Children should be closely supervised at all times.