

Non-electric Hot Box (3074)

Instructions for heating:

- Open the vent on the top.
- Light 4 sternos and place one in each corner.
- Replace sternos as needed.
 - Four will heat the hot box to 160-170°F.
 - Four will last approximately two hours.